Thank you for choosing eLock.



CompX eLock° is a highly engineered lock with a motor-driven latch. Its uncompromising lock control electronics include a non-volatile memory that stores 250 user / supervisor codes and audit trail. With optional LockView° audit trail software, CompX eLock° remembers 1500 access attempts. Programming is simple with numeric keypad or Windows™ based LockView° software.



Quick Programming Guide

1. GETTING STARTED:

- a. The unit is shipped with no user / supervisor codes
- b. Press and hold # until the beeping stops
- c. Input the new PIN (4 digit min) and press present new card
- d. This PIN / Card is now a supervisor in slot #001

2. ADD A USER:

- b. Press and hold until beeping stops
- c. Input the new user PIN (4 digit min) and press present new card

3. ADD A SUPERVISOR:

- a. Input a valid supervisor PIN and press (#) or present valid supervisor card
- b. Press and hold # until beeping stops
- c. Press and hold again until beeping stops
- d. Input new supervisor PIN (4 digit min) and press or present NEW supervisor card

4. DELETE A USER OR SUPERVISOR:

- a. Input a valid supervisor PIN and press present valid supervisor card
- b. Press and hold until beeping stops
- c. Input the PIN to be deleted and press


 or present existing card to be deleted

5. ADD A USER WITH A SPECIFIC SLOT ASSIGNMENT:

- a. Input a valid supervisor PIN and press # or present valid supervisor card
- b. Press and hold # until beeping stops
- c. Enter slot number that will be assigned to user and press (example: to program slot 6 type 006 (#))
- d. Input the new user PIN (4 digit min) and press or present NEW card

6. DELETE A USER WITH A SPECIFIC SLOT ASSIGNMENT:

- a. Input a valid supervisor PIN and press or present valid supervisor card
- b. Press and hold \text{ until beeping stops}
- c. Enter slot number to be cleared and press (example: to clear slot 6 type 006 (1))
- d. Enter slot number to be cleared again and press (#) (example: to clear slot 6 type 006 (#))

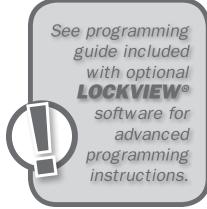

CompX eLock® Accessories





AC ADAPTER

Part Numbers: **EL-2004-9VWB**

(for use with the CompX eLock kit)

EL-2004-ACWB (for use with 12V electric strikes)



MIN-ELATCH

Part Number: **EL-LATCH-SM**



TORX HEAD
DRIVER FOR
FRIG KIT

(Torx head bit also available)

Part Number: **EL-DRV-15**



MOTORIZED LATCH*

Part Number: **EL-LATCH-3**



LATCH CABLE,* 24"

Part Number: **EL-2004-LC**



RJ 11 EXTENSION KIT, 4"

Part Number: **EL-2004-RJ KIT**



HID® PROX USER,
SUPERVISOR CARD

Part Number:

EL-2004-PC (no logo)

EL-2004-PC-S (CSP logo)



MAGSTRIPE USER, SUPERVISOR CARD

Part Number:

EL-2004-MSC (no logo)

EL-2004-MSC-S (CSP logo)



LOCKVIEW®
SOFTWARE KIT

(provided with 7ft., 6-pin RJ11 cable, 1-USB dongle, 1 LockView® CD)

Part Number: **EL-LOCKVIEW-3**



HID® PROX TAG

Part Number: **EL-2004-PT**






TEMPLATE ON OPPOSITE PAGE

CompX eLock® Surface Mounting




Use the diagrams below as a template for holes to be drilled and for mounting your CompX eLock. Put this template on the **outside** of the cabinet door where the eLock will go, and you can drill right through it to mount your CompX eLock.

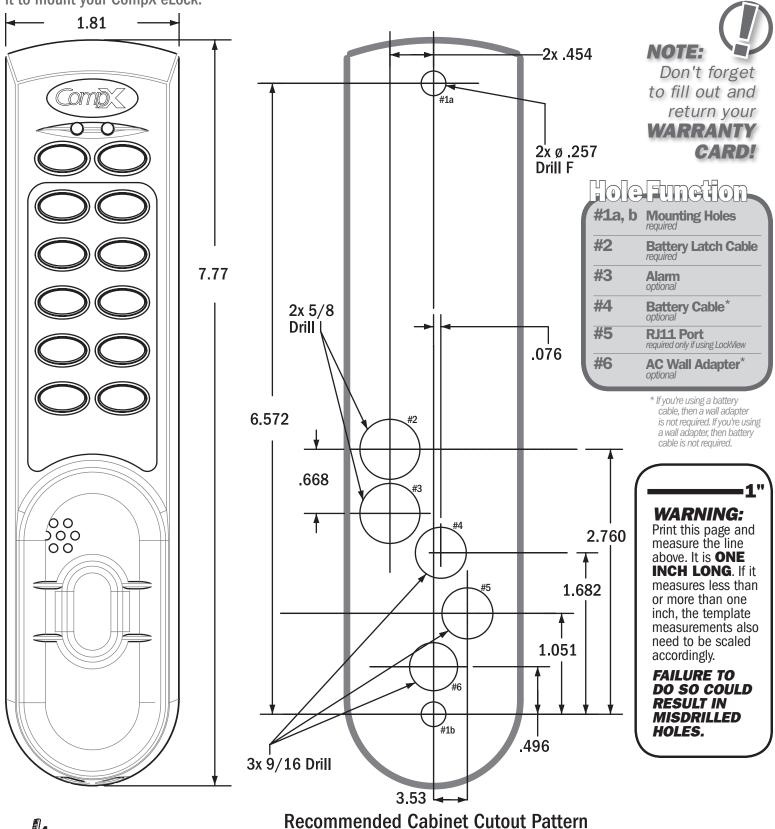



WARNING: Print this page and measure the line above. It is **ONE INCH LONG**. If it measures less than or more than one inch. the template measurements also need to be scaled accordingly.


FAILURE TO DO SO **COULD RESULT IN** MISDRILLED HOLES. Use the diagrams below as a template for holes to be drilled and for mounting your CompX eLock° latch. Put this template on the inside of the cabinet door where the latch will go, and you can drill right through it to mount your CompX eLock[®] latch.

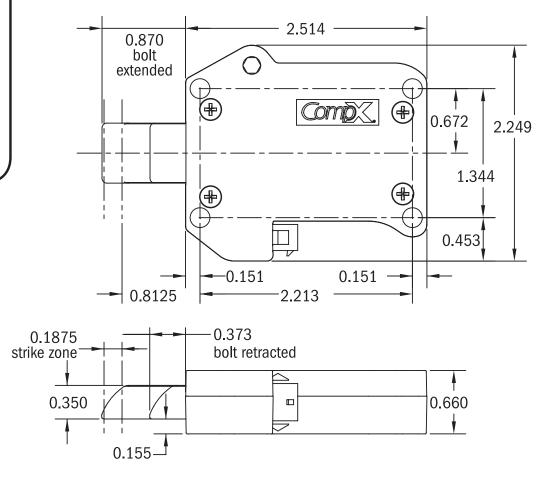

LockView® Software

- ☐ Add, edit, view and delete users / supervisors and their credentials
- Add, edit and delete CompX eLocks[®]
- ☐ Assign access rights between users / supervisors and CompX eLocks in the database
- USB connection required
- ☐ Download, view, save, print, archive and delete audit trails
- Dual credential access available
- Set real time clock
- Time based access restrictions
- □ Create user groups
- Windows[™] based

LockView is a Registered Trademark of CompX International. Windows is a trademark of the Microsoft Corporation. Specifications may vary based on user application.

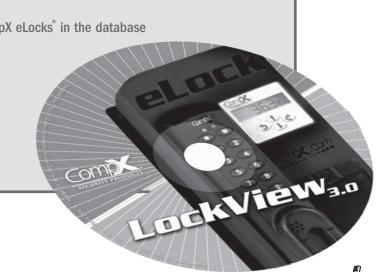




TEMPLATE ON OPPOSITE PAGE

CompX eLock® Warranty Card



These stickers are included with each CompX eLock® unit. Please review the information and keep the stickers in a safe location as they may be needed to reset or identify a specific eLock unit. The codes shown here are not real codes. They are representations of what the stickers will look like.

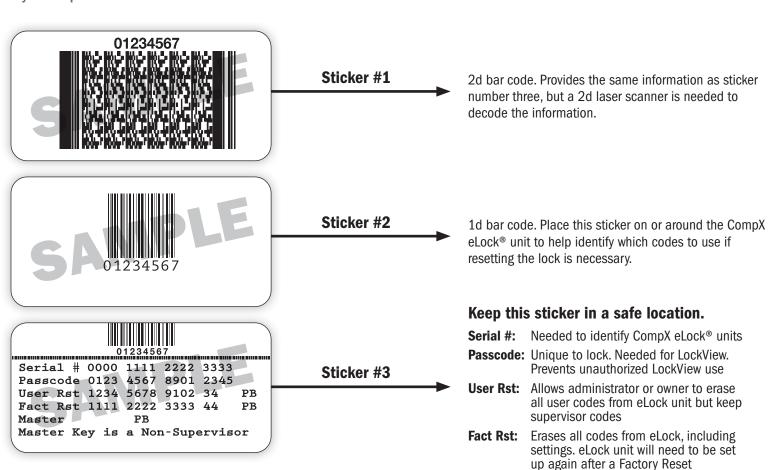

CompX eLock® Warranty Card



O1234567 Serial # 0000 1111 2222 3333 Passcode 0123 4567 8901 2345 User Rat 1234 5678 9102 34 PB Fact Rst 1111 2222 3333 44 PB Marter PB Master Key is a Non-Supervisor	PLACE STAMP HERE	Sticker #3	Affix one copy of sticker #3 (see page 7) to the CompX eLock® registration card and return to CompX Fort at address shown on the
There should be two (2) identical stickers in the box with CompX eLock. Keep one in a secure location, and affix the other sticker in the marked area above. The codes may be needed to reset or identify a specific eLock unit. To request a product demonstration, or for more information, call 864-297-6655 or visit our website. http://compx.com/products-elock.html	Product Warranty / Registration 715 Center Street Grayslake, IL 60030		NOTE: Don't forget to fill out and return your WARRANTY CARD!

Date of purchase	Purchase price (before tax) Model		Serial	#	
Pass Code		User Reset Code		Factor	y Reset Code	
Place of purchase		City		State		
_	uture advertising and promotions email / info for future advertising		No, you cannot u	ise my email / in	fo for future adve	rtising and promotions
First Name		MI	Last Name			
Address				Suite		include area code)
City		State Primary II	ool 🔲 Sa	staurant/Bar fe	oply) Locker Cabinet Other	Refrigerator Freezer



864.297.6655

compxelock.com elock@compx.com PO Box 200 Mauldin, SC 29662

